



014874415

4358-6796 11.6.15

© 2015 Dorel Juvenile. All Rights Reserved.

# RodiFix


## Booster Seat

For children 40-120 lb (18.1 -54.4 kg)  
40-57 in. (101.6-144.8 cm) and at least 4 years old

**KEEP INSTRUCTIONS FOR FUTURE USE.**  
Read all instructions before using this booster seat.

**⚠ WARNING:**

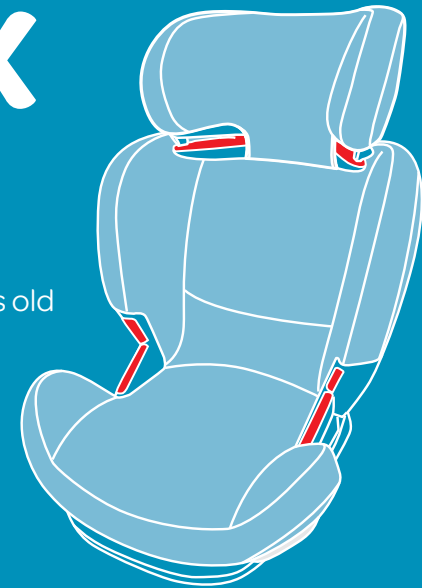

Failure to follow the warnings on the labels  
and in the instruction manual can result in  
serious injury or death to your child.



## Table of Contents

<b>Getting Started</b> .....	<b>1</b>
Important Symbols .....	1
Parts of the Booster Seat .....	2
<b>General Use</b> .....	<b>4</b>
Adjusting Headrest Height .....	4
Reclining the Booster Seat .....	5
Removing Seat Pad for Cleaning.....	6
<b>Safety Information</b> .....	<b>8</b>
Booster Seat Use .....	8
Installation in Vehicle .....	8
Vehicle Seating Position .....	9
<b>Vehicle Information</b> .....	<b>10</b>
Understanding Your Vehicle .....	10
IsoFix LATCH and Vehicle Belts.....	11
Knowing Your Vehicle Belts .....	12
Aircraft Information .....	13

## **Booster Seat**.....**14**

 IsoFix LATCH Installation .....	15
 Lap and Shoulder Belt Installation.....	19

## **Important Information** .....

Dorel Juvenile Group Information .....	22
Registration and Safety Notices .....	23
Warranty .....	24
Replacement Parts Order Form.....	26
Troubleshooting.....	29

## Important Symbols



### **Vehicle Belts**

See page 12 for vehicle belt information.



### **LATCH**

See page 11 for LATCH information and storage location.



### **Instruction Manual Storage**

See page 3 for storage location.





**To help you recognize instructions which are most critical to your child's safety, we use this symbol.**

**Failure to follow these warnings can result in the serious injury or death of your child.**


## Parts of the Booster Seat

Front View

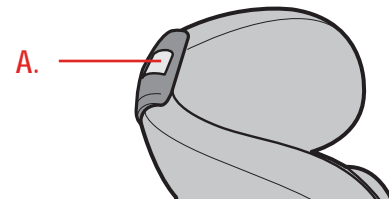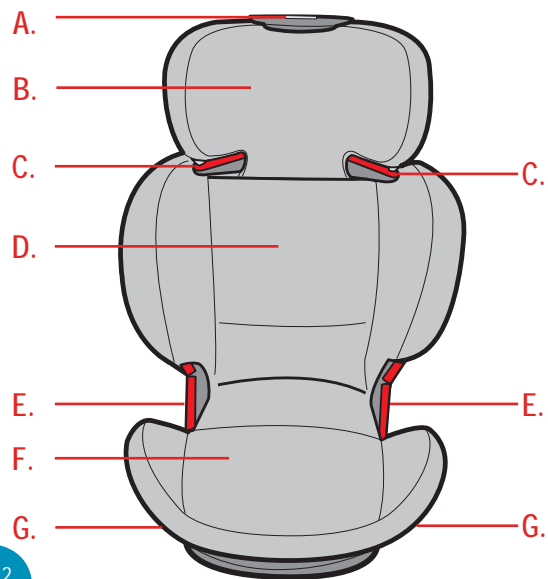


- A. Headrest Adjustment Lock
- B. Adjustable Headrest
- C. Shoulder Belt Positioning Guides
- D. Backrest
- E. Lap Belt Path
- F. Seat Base
- G. Seat Recline Buttons

Side View

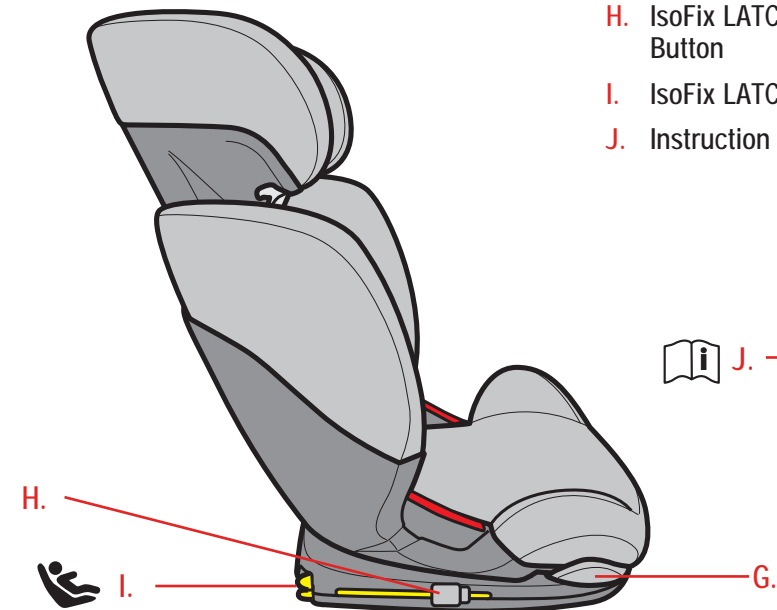


- H. IsoFix LATCH Connector Release Button
- I. IsoFix LATCH Connector
- J. Instruction Manual Storage


Bottom View

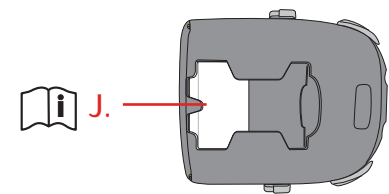

### Adjusting Headrest Height and Side Wings

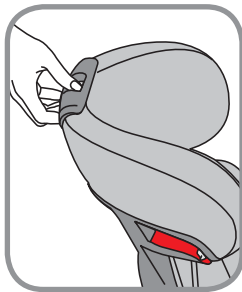


**Press Headrest Adjustment Button to Raise or Lower Headrest**

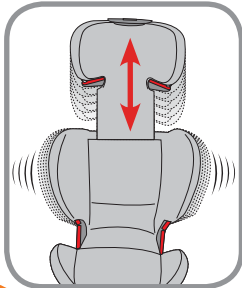

**Headrest has Multiple Headrest Positions**

As the headrest rises, the side wings will move out to accommodate the older child.

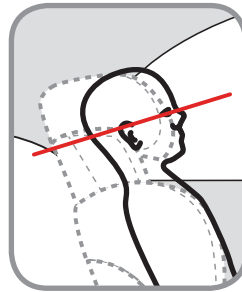

**Adjust Headrest to Fit Your Child**

Pull headrest up or down so the tops of your child's ears are at the midpoint of the headrest.

### Reclining the Booster Seat

The reclined positions are to be used only to install the booster seat flush against the vehicle seat back. Vehicle seat back must be upright.





**To Recline Entire Seat:**

Squeeze the recline buttons and pull out on the booster seat.

**For Upright:**

Squeeze the recline buttons and push the seat upright.

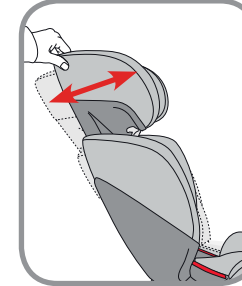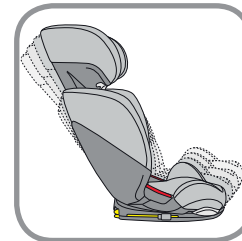


**To Recline Only the Seat Back:**

Grab the top of the seat back and pull back.

You will here a "click" when you change positions.


## Removing Seat Pad for Cleaning

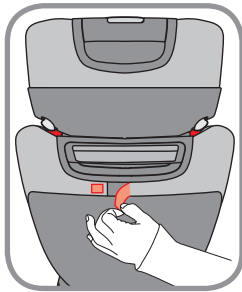


1. From the Back of the Seat, Undo the Fastening Strip



2. Unhook the Elastic Strap

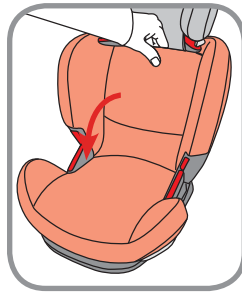


3. Pull Backrest Pad Off of the Backrest

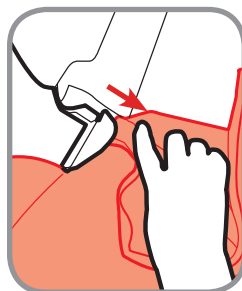

4. Pull Seat Pad Out From Behind Tab at Lap Belt Path

Repeat for other side. Then pull the pad off of the seat.

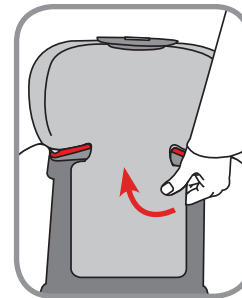

5. Gently Pull Headrest Pad Off of the Headrest

**⚠ WARNINGS:** Do not use booster seat without the seat pad. Failure to do this can result in serious injury or death.

### Cleaning Pad

Machine wash all pieces separately with cold water on a gentle cycle. Make sure to attach fastening strips so they are not exposed. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

### Replacing Pad

Replace pad by reversing order.

Starting with the headrest, slip pad over the headrest. Slip the pad over the bottom base and tuck it behind the tabs at lap belt path. Slip the pad onto the backrest. Tuck outer edge of pad behind the shell. On the back of the backrest, attach the elastic strap and refasten the fastening strip.

### **Booster Seat Use**

Do not use this booster seat unless the child is 40-120 lb (18.1-54.4 kg) and 43-57 in. (110.1-144.8 cm).

Never take your child out of the booster seat while the vehicle is moving.

Never leave child unattended.

Placing your child in a hot booster seat may result in burns.

Do not use a booster seat with damaged or missing parts.

Do not substitute parts or try to modify the booster seat in any way.

Do not use any booster seat accessory except those approved by Dorel Juvenile Group.

Never allow any child to play with this booster seat; it is not a toy.

Do not remove or cover up any of the warning labels or other labels on the booster seat.

Read all instructions for additional warnings.

On the side of the booster seat there is a date of manufacture label. Do not use this booster seat more than 10 years after the date of manufacture.

### **Installation in Vehicle**

Check the vehicle belt before each use. Use only if the belt is tightened properly and locked securely in place.

This child restraint should always be secured in the vehicle by the IsoFix LATCH or with the vehicle belt even when not in use. In a crash or sudden stop, an unsecured child restraint could injure occupants.

Do not use a child restraint that has been in a crash. You must get a new child restraint.

### **Vehicle Seating Position**

Check the vehicle owner's manual for more information about air bag/booster seat use.



Use the booster seat only on vehicle seats that face forward.



Do not use on seats that face the sides or rear of the vehicle.

For vehicles without a back seat, refer to your vehicle owner's manual.

If you are not sure where to place the booster seat in your vehicle, consult your vehicle owner's manual, contact Dorel Juvenile Group Consumer Relations Department, or visit your local Child Passenger Inspection Station. Go to <http://www.safercar.gov/cpsApp/cps/index.htm> to find your closest station.



Children are safer when properly restrained in

rear seating positions than in front seating positions.

According to National Highway Traffic Safety Administration information, children in rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

**To avoid your child being seriously burned, take the following precautions:**

1. Park in the shade or where sun does not directly hit the booster seat.
2. Cover the booster seat with a sheet or blanket when not in use.
3. Check for hot seat and buckles before placing child in booster seat.

To help protect your vehicle seat's upholstery from damage, use a single layer towel underneath and behind booster seat.

## Understanding Your Vehicle

Your vehicle's features may be considerably different than those pictured here.



Consult your vehicle owner's manual to help identify your vehicle's specific features and locations.




### LATCH Anchors

Located in the seat bight



### Vehicle Seat Belts

## IsoFix LATCH and Vehicle Belts

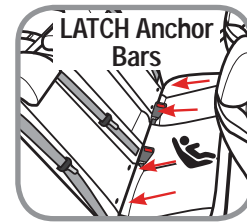


### The LATCH System

LATCH (Lower Anchors and Tethers for Children) is a universal system for installing child restraints.

This IsoFix LATCH system can ONLY be used in vehicles that have the LATCH anchor bars installed and designated LATCH seating positions. **This IsoFix LATCH system cannot be used with raised LATCH anchors in the vehicle seat back.** Most vehicles manufactured after September 2002 are equipped with LATCH.

Check your vehicle owner's manual to see which seating positions may be equipped with the LATCH system.

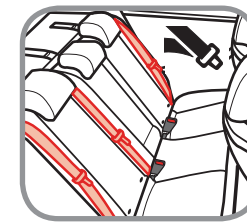

### Vehicle Belts

There are some vehicle belts that will not work with a child restraint or will require special attention. Check your vehicle owner's manual for specific instructions.

**⚠ WARNINGS:** When used correctly the LATCH system or vehicle belts are equally safe.

## Knowing Your Vehicle Belts

Review your vehicle owner's manual for vehicle seat belt use with child restraints. This is your best source for information concerning your vehicle.

Not all vehicle belts will work with this child restraint. This child restraint must be tightly locked in place at all times. You must determine if your vehicle's belts are compatible with this child restraint.

### Vehicle Belts


- **Automatic/Passive vehicle seat belts**

You **MUST** have a lap belt to install any child restraint. An automatic (passive) shoulder belt may or may not have a separate lap belt.



- **Vehicle belts in center of the door or side panel**

You must move the child restraint to another seating location.

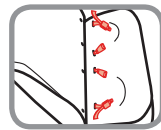

- **Vehicle belts that are in front of the seat bight**

You may need to move the child restraint to another seating location.

## Aircraft Information




This booster seat is not certified for use in aircraft because aircraft seats do not have shoulder belts.

### Booster Seat



40-120 lb (18.1-54.4 kg)  
40-57 in. (101.6-144.8 cm)  
At least 4 years old

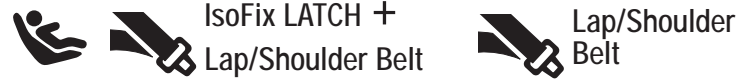

**⚠ WARNINGS:** Do not use this booster seat if the tops of your child's ears are above the top of the booster seat's headrest.

You **MUST** use the vehicle's lap and shoulder belt system when restraining the child in this booster seat.


Do not use only the lap belt when using this seat as a booster seat.

The shoulder belt must always be adjusted snugly across the child's chest. **NEVER** place the shoulder belt under the child's arms.

Failure to follow these warnings can result in serious injury or death.

### + IsoFix LATCH Installation

**⚠ WARNINGS:** Do not use the LATCH system if the seat belt or seat belt buckle is not easily accessible with the booster seat secured to the anchors.

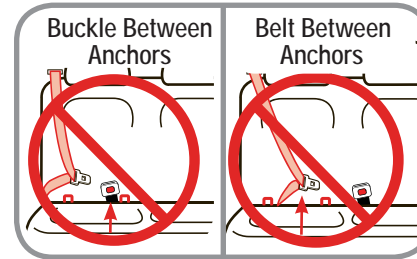


Do not use the LATCH system if the seat belt or seat belt buckle is between the LATCH anchors.



Do not use the LATCH system if the LATCH anchor bars are above the seat bight.


Failure to follow these warnings can result in serious injury or death.

Review your vehicle owner's manual for LATCH use and LATCH locations.

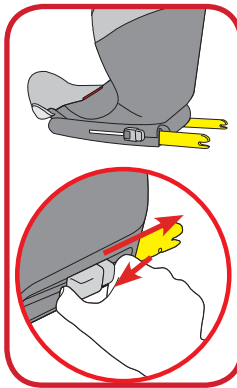


**1. Extend IsoFix LATCH Connectors**

Press the button in and push the IsoFix LATCH connector out of the shell. Repeat for other side.

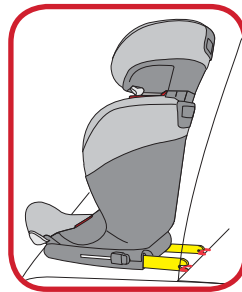

**2. Place Booster Seat Forward Facing in Vehicle**

Align the IsoFix LATCH connectors with the vehicle's anchor bars in the chosen seating position. Attach the connectors to the anchor bars. You may need to push down on the seat to align.

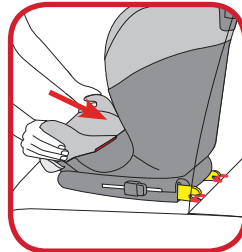


**3. Push the Booster Seat Back Against the Vehicle Seat**

Make sure the seat is connected to the anchor bars.



**4. Place Child in Booster Seat**

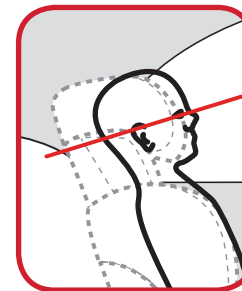

**5. Adjust Headrest to Fit Your Child**

Pull headrest up or down so the tops of your child's ears are at the midpoint of the headrest.




**6. Check Headrest**

If the vehicle headrest pushes the booster seat away from the vehicle seat, review the vehicle owner's manual to see if you can remove the vehicle headrest. If not, try a different seating location.




**7. Position Lap Belt on Child**

The lap belt should lay snugly across the child's upper thighs and not on the stomach.

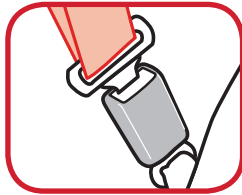

**8. Buckle Vehicle Belt**

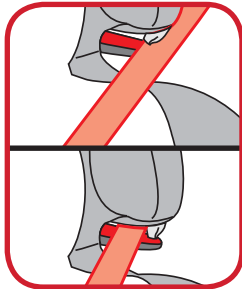

**9. Position Shoulder Belt on Child**

Secure the shoulder belt through the shoulder belt positioning guide on the headrest.

Pull up on the shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's shoulder and across the chest and not on their face or neck. Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.



**To Remove Shoulder Belt From Shoulder Belt Guide**

Push the silver belt guide lock up and pull the vehicle shoulder belt out.




**To Remove IsoFix LATCH Connector From Vehicle Anchor**

Press the button in and slide the IsoFix LATCH connector back into the shell.




**Lap and Shoulder Belt Installation**

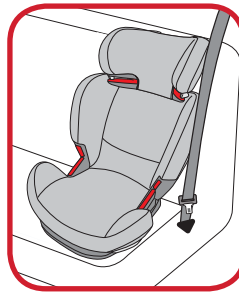

**1. Place Booster Seat Forward Facing Flush Against Vehicle Seat Back**



**2. Place Child in Booster Seat**

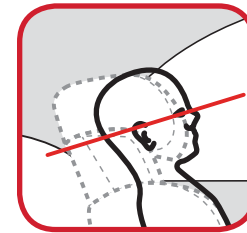

**3. Adjust Headrest to Fit Your Child**

Pull headrest up or down so the tops of your child's ears are at the midpoint of the headrest.



**4. Check Headrest**


If the vehicle headrest pushes the booster seat away from the vehicle seat, review the vehicle owner's manual to see if you can remove

the vehicle headrest. If not, try a different seating location.




**4. Position Lap Belt on Child**

The lap belt should lay snugly across the child's upper thighs and not on the stomach.

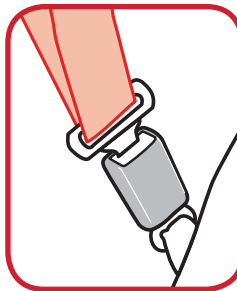

**5. Buckle Vehicle Belt**

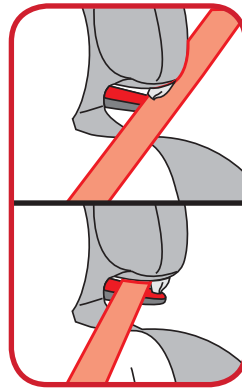


**6. Position Shoulder Belt on Child**

Secure the shoulder belt through the shoulder belt positioning guide on the headrest.

Pull up on the shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's shoulder and across the chest and not on their face or neck.

Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.

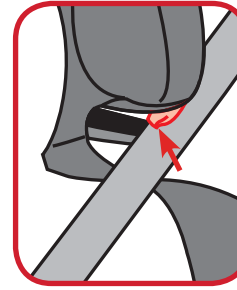

**To Remove Shoulder Belt From Shoulder Belt Guide**

Push the silver belt guide lock up and pull the vehicle shoulder belt out.

## Dorel Juvenile Group Information

Thank you for choosing this booster seat. The Maxi-Cosi® brand is part of the DJG family and is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do. Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions.

No one can predict if use of a child restraint will prevent injury or death in a particular crash.

However, combined with careful driving, proper use of a child restraint can lower a child's risk of injury or death in most crashes.

Your child's safety is worth the time it will take to read and follow these instructions. After reading, if you still have questions or have any concerns with this child restraint, please contact our Consumer Relations Department at:

**Website:** [www.maxi-cosi.com](http://www.maxi-cosi.com)

**Email:** [consumer@maxicosi-us.com](mailto:consumer@maxicosi-us.com)

**Telephone:** 1-800-951-4113

M-TH from 8 A.M. to 6 P.M. EST  
FRI from 8 A.M. to 4:30 P.M. EST

### Mailing Address:

Dorel Juvenile Group, Inc.  
Consumer Relations Department  
P.O. Box 2609  
Columbus, IN 47202-2609

**Fax:** 1-800-207-8182

## Registration and Safety Notices

Please complete the postage-paid registration card that came with your child restraint, and send it to us. Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, email address if available, the restraint's model number, and manufacturing date to:

**Dorel Juvenile Group, Inc.**  
**Consumer Relations Department**  
PO Box 2609  
Columbus, IN 47202-2609

or call 1-800-951-4113 or register online at [www.djgusa.com/registration/carseat/us](http://www.djgusa.com/registration/carseat/us).

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.NHTSA.gov>.

**Consumer:** Just fill in your name, address and email. Please print (use dark ink).

Your Name \_\_\_\_\_

Your Street Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_

Model Number \_\_\_\_\_ Line Code \_\_\_\_\_ Manufacture Date \_\_\_\_\_

AB123CDE MAXI-COSI-CARSEAT 01/22/2015

L#11 B265035

Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on side of seat.

## Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for one year from the date of original purchase. **An original receipt is required to validate your warranty.** DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may email us at [consumer@maxicosi-us.com](mailto:consumer@maxicosi-us.com); fax us at 1-800-207-8182 24 hours a day; write to DJG, Consumer Relations Department, P. O. Box 2609, Columbus, IN 47202-2609; or call 1-800-951-4113 from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

### **Proof of purchase is required and shipping charges are the responsibility of the consumer.**

**Warranty Limitations:** This warranty does not include damages which arise from misuse or abuse of this product.

**Limitation of Damages:** The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

### **Limitation of warranties and other warranty terms and state law rights:**

Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written

warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.

Please note: Our product warranty only applies when purchased from an authorized Maxi-Cosi retailer. The origin of products not purchased through these authorized retailers is unknown and could be counterfeit. We cannot support products from an unknown origin as we cannot verify the handling or condition of such merchandise. We maintain a strong network of

authorized retailers to ensure you are purchasing safe and complete products. Fulfillment by a third party does not guarantee you are purchasing from one of these authorized retailers. Pricing which is inconsistent with the majority of retailers is a strong indication that the retailer is not authorized, as we have a consistent price offering across all authorized retailers. If you are unsure of the authorization status of a retailer you are considering purchasing from, or have purchased from, you can check [maxi-cosi.com](http://maxi-cosi.com) or call our Consumer Relations department at 1-800-951-4113.

### Replacement Parts Order Form

Complete the form. Your model number and manufacture date code **MUST** be included on the form to ensure proper replacement parts. The codes can be found on a label on side of child restraint. Payment in U.S. dollars must accompany your order. Choose parts needed from the list on page 26. Return the form with payment to:

**Dorel Juvenile Group, Inc.**  
**Consumer Relations Department**  
P.O. Box 2609  
Columbus, IN 47202-2609

Fax orders to: 1-800-207-8182

Please make money orders payable to Dorel Juvenile Group, Inc. Fill in the area on the next page to charge credit card. (Visa or MasterCard **only**). We do not accept cash, personal checks, or other credit cards. All outside of U.S. and Canada **MUST** use credit card.

Ship To: (Please Print)

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_

State/Province: \_\_\_\_\_ Zip: \_\_\_\_\_

Telephone: \_\_\_\_\_ Email Address: \_\_\_\_\_

We **MUST** have this information:

Model Number (8 to 9 characters): \_\_\_\_\_

Manufacture Date (mm/dd/yyyy): \_\_\_\_\_

**Fill Out For Credit Card**  
 Visa  MasterCard

Card Exp. Date: \_\_\_\_\_ Cardholder's Name: \_\_\_\_\_

Card Number: \_\_\_\_\_ Signature: \_\_\_\_\_

### Replacement Parts List

**NOTE:** If requested color is not available, similar color will be substituted. Prices are subject to change.

Part	Cost	Qty	Total Cost
Seat Pad Set.....	\$99.00.....	_____	\$_____
Instructions.....	\$0.00.....	_____	\$_____
<b>Merchandise Total:</b> .....			\$_____
<b>Shipping and Handling:</b> .....			\$_____
Up to \$25.00 .....	\$5.95	\$100.01 to \$150.00 .....	\$10.95
\$25.01 to \$50.00 .....	\$6.95	\$150.01 to \$200.00 .....	\$11.95
\$50.01 to \$75.00 .....	\$8.95	\$200.01 and up.....	\$13.95
\$75.01 to \$100.00 .....	\$9.95	Outside Continental USA.....	\$10.00

**Sales Tax:** .....\$\_\_\_\_\_

(Arizona, California, Georgia, Indiana, Missouri, South Carolina, and Texas residents add applicable sales tax.)

**Grand Total:** .....\$\_\_\_\_\_

No shipping and handling on instructions for quantities under 6. Add \$.50 for each instruction over 6, then add applicable shipping and handling.

CUT ON DOTTED LINE

### Troubleshooting

**1. Locate a Child Safety Seat Inspection Station for hands on training on how to use your child restraint:** Visit your local Child Passenger Inspection Station or go to <http://www.safercar.gov/cpsApp/cps/index.htm> to find your closest station.

**2. If your booster seat is not held securely by the vehicle belt:**  
Remove all the slack in the vehicle belt. Make sure the belt buckle is not up against the child restraint where the belt cannot be tightened. If you cannot secure the child restraint tightly, move it to another seating location.

**3. If the shoulder belt crosses the child's neck when using the booster seat:**  
Try moving the booster seat toward the center of the vehicle or move the vehicle seat forward or back. **Do Not** place the shoulder belt behind the child.